


IMPORTANT

PLEASE READ BEFORE INSTALLATION

FITTING INSTRUCTIONS FOR YOUR **STABIL-MATE** HYDRAULIC STABILISING SYSTEM

- A handyman or a caravan repairer can fit this stabilising system.
- Please note: No copper tube or oil are supplied with this stabilising system.
- When fitting this unit please ensure all **brass fittings are tight** by using either thread-tape or a hydraulic thread locker. **DO NOT** use on Olive Connections.
- It is important that all four legs face the rear of caravan and run parallel with chassis as illustrated in Diagram A.

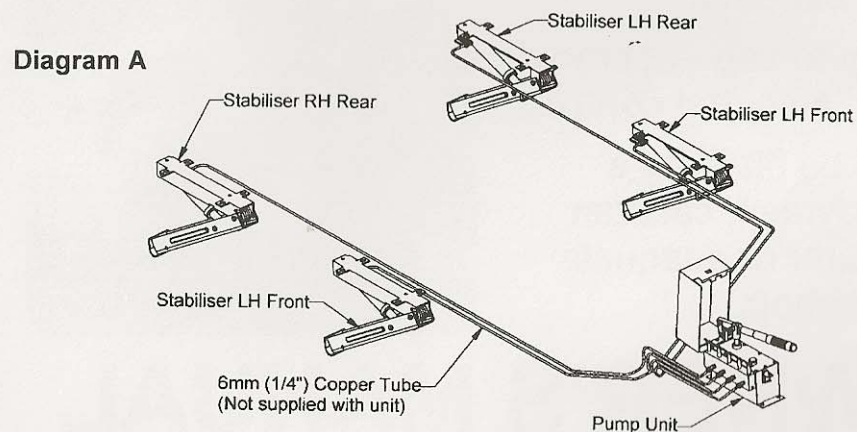

- Bolt the pump unit to the A-Frame of the caravan. **DO NOT WELD** as it may need to be removed at some time in the future for servicing.


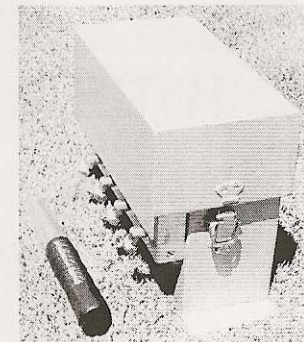


Diagram B

- Connect 6mm (1/4 inch) copper tube to the pump unit, fasten along the chassis firmly with saddles and then connect to the hydraulic ram on a leg, and repeat for remaining three legs as illustrated in Diagram A.

- Please cut and position the stickers (which are supplied) on the top of the pump unit next to the valve which corresponds with the leg as Diagram C illustrated

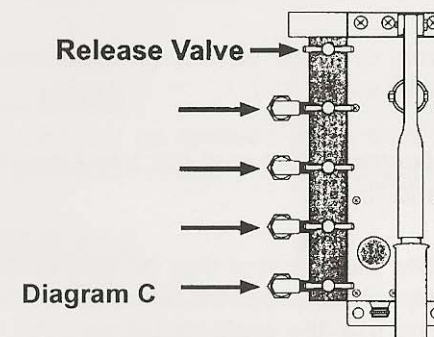

- This product has been designed to use transmission fluid only, of which 600ml should be sufficient. **DO NOT USE ANY OTHER TYPE OF OIL.**
- This unit should not require bleeding. It will purge the air from the system each time it is used.
- Once your Stabil-Mate has been installed, when the legs are down it should look the same as shown in Diagram D.

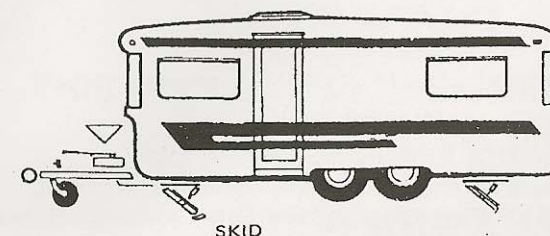


Diagram D