



Ingombri minimi

NUMERO BRACCI

SPORGENZA BRACCIO	NUMERO BRACCI			
	2 BRACCI	3 BRACCI	4 BRACCI	6 BRACCI
165	206	300	394	581
215	256	375	494	752
265	306	450	594	902
315	377	546	715	1052
365	427	621	815	1202

Numero staffe

 
LARGHEZZA TENDA

SPORGENZA BRACCIO	LARGHEZZA TENDA															
	240	300	360	410	480	540	600 *	650 *	700 *	800 *	900 **	1000 **	1100 **	1200 ***	1300 ***	1400 ***
	NUMERO STAFFE															
165	2	2	3	3	3	4	4	7	7	8	8	9	9	12	12	13
215	2	2	3	3	3	4	4	7	7	8	8	9	9	12	12	13
265	-	2	3	4	4	4	4	7	7	8	8	9	9	12	12	13
315	-	-	4	4	4	5	5	7	7	8	8	9	9	12	12	13
365	-	-	-	4	4	5	5	7	7	8	8	9	9	12	12	13


* 1 supporto compensatore ** 2 supporti compensatore *** 3 supporti compensatore

Dimensioni della tenda chiusa **

installazione a parete

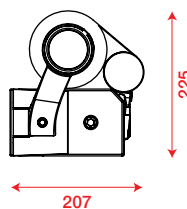


inclinazione minima 3°

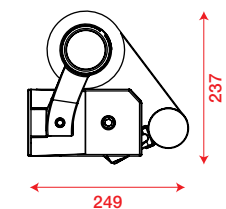 

inclinazione massima 65°


Staffe **

 installazione a parete

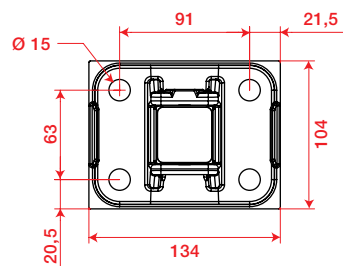

Lunghezza del braccio e inclinazione

 installazione a parete

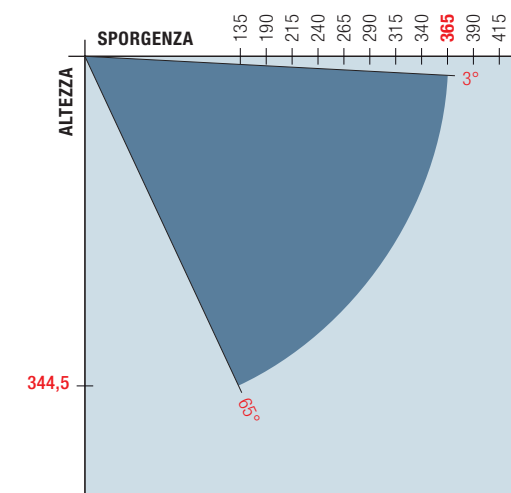

Caratteristiche tecniche

