

CARPENTERS GARAGE

Head Office: 69 BICKERSTETH ROAD, TOOTING, SW17 9SH

TELEPHONE: 020 8672 4891 020 8672 6213 www.carpentersgarage.co.uk



RECOMMENDED SERVICE SCHEDULES

PRE SERVICE 1. FIT PROTECTIVE COVERS	MINOR SERVICE X	FULL SERVICE X
PRE SERVICE ROAD TEST. (MAXIMUM SPEED, 30 MPH.)	X	X
OFF RAMP CHECKS		
1. PRESSURE TEST THE COOLING SYSTEM	X	Х
2. VISUAL INSPECTION OF THE COOLING SYSTEM	X	Х
3. CHECK THE ANTIFREEZE STRENGTH	X	Х
4. INSPECT THE DRIVE BELTS (NOT CAM/TIMING BELT)	X	Х
5. INSPECT/REPORT ON POLLEN FILTER (NOT ALL MODELS)		Х
6. INSPECT AIR FILTER (NOT LONG LIFE)	X	
7. REPLACE AIR FILTER (NOT LONG LIFE)		Х
8. REPLACE SPARK PLUGS (NOT LONG LIFE)		Х
9. CHECK/TOP UP OIL AND WASHER FLUIDS	X	Х
10. CHECK BOILING POINT OF THE BRAKE FLUID		Х
11. CHECK OPERATION OF ALL EXTERNAL LIGHTS	. X	X
12. CHECK OPERATION OF WIPERS AND WASHERS	X	Х
13. CHECK OPERATION OF THE INDICATORS/HAZZARDS AND HORN	X	Х
14. CHECK OPERATION OF INSTRUMENT PANNEL WARNING LIGHTS	X	X
15. INSPECT SEAT BELT CONDITION (NOT STOWED SEATS)		Х
16. LUBRICATE THE DOOR, BOOT AND BONNET HINDGES	X	Х
17. CHECK, WHERE POSSIBLE, DIESEL ADDATIVE LEVEL		X
18. EODB CHECK OF ECU FOR FAULT CODES	Parallel and the second second	Х
UNDER VEHICLE INSPECTION 1. CHANGE THE ENGINE OIL AND FILTER 2. CHANGE THE DIESEL FILTER (NOT LONG LIFE)	X	X
		V
· · · · · · · · · · · · · · · · · · ·		X
3. ADVISE ON FUEL FILTER REPLACEMENT	V	Х
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS	. X	X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS	. X	X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS	. X	X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION		X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS	X	X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE	. X X	X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES)	X	X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM	. X X	X X X X X X X X X X X X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS	. X X	X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS 13. INSPECT THE BRAKE LININGS AND VISABLE COMPONENTS	. X X	X X X X X X X X X X X X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS 13. INSPECT THE BRAKE LININGS AND VISABLE COMPONENTS 14. INSPECT THE VISABLE HAND BRAKE COMPONENTS	X X X	X X X X X X X X X X X X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS 13. INSPECT THE BRAKE LININGS AND VISABLE COMPONENTS 14. INSPECT THE VISABLE HAND BRAKE COMPONENTS	. X X	X X X X X X X X X X X X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS 13. INSPECT THE BRAKE LININGS AND VISABLE COMPONENTS 14. INSPECT THE VISABLE HAND BRAKE COMPONENTS 15. ADJUST CLUTCH (MANUAL ADJUSTER ONLY)	X X X	X X X X X X X X X X X X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS 13. INSPECT THE BRAKE LININGS AND VISABLE COMPONENTS 14. INSPECT THE VISABLE HAND BRAKE COMPONENTS 15. ADJUST CLUTCH (MANUAL ADJUSTER ONLY) POST SERVICE 1. CHECK PETROL EXHAUST EMMISIONS	X X X	X X X X X X X X X X X X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS 13. INSPECT THE BRAKE LININGS AND VISABLE COMPONENTS 14. INSPECT THE VISABLE HAND BRAKE COMPONENTS 15. ADJUST CLUTCH (MANUAL ADJUSTER ONLY) POST SERVICE 1. CHECK PETROL EXHAUST EMMISIONS 2. CLEAN THE OUTSIDE OF THE FRONT WINDSCREEN	X X X	X X X X X X X X X X X X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS 13. INSPECT THE BRAKE LININGS AND VISABLE COMPONENTS 14. INSPECT THE VISABLE HAND BRAKE COMPONENTS 15. ADJUST CLUTCH (MANUAL ADJUSTER ONLY) POST SERVICE 1. CHECK PETROL EXHAUST EMMISIONS 2. CLEAN THE OUTSIDE OF THE FRONT WINDSCREEN	X X X	X X X X X X X X X X X X X X X X X X X
3. ADVISE ON FUEL FILTER REPLACEMENT 4. CHECK FOR VISABLE OIL, FUEL AND COOLANT LEAKS 5. INSPECT THE FRONT AND REAR SUSPENSION COMPONENTS 6. INSPECT THE STEERING COMPONENTS 7. INSPECT THE DRIVE/PROP SHAFT CONDITION 8. LUBRICATE ANY GREASE POINTS 9. CHECK THE TYRE CONDITION AND PRESSURE 10. CHECK THE SPARE TYRE AND CONDITION (NOT STOWED TYRES) 11. INSPECT THE EXHAUST SYSTEM 12. REMOVE THE ROAD WHEELS AND DRUMS 13. INSPECT THE BRAKE LININGS AND VISABLE COMPONENTS 14. INSPECT THE VISABLE HAND BRAKE COMPONENTS 15. ADJUST CLUTCH (MANUAL ADJUSTER ONLY) POST SERVICE 1. CHECK PETROL EXHAUST EMMISIONS 2. CLEAN THE OUTSIDE OF THE FRONT WINDSCREEN 3. POST SERVICE ROAD TEST (MAXIMUM SPEED 30 MPH)	X X X	X X X X X X X X X X X X X X X X X X X