

## FITTING INSTRUCTIONS FOR MODEL HW001


Fit short van tube to the caravan's side so that the threaded end is just above the roof line. Permanently fix to the caravan with the brackets and screws provided, ensuring that the top bracket is as near as possible to the top of the van. To prevent twisting of this fixture a small screw is provided which should be screwed through bracket with hole and into the PVC tube.

The antenna mast as supplied is for pop top models to achieve a height of approximately 1 metre above the top of the van. (For non pop top vans 50cm can be cut off antenna mast if required).

Screw antenna mast and short van tube together at connection union. Antenna head, (with cable attached) is simply attached at T Joint.

No screwing or mechanical joining is needed.

**Please note: Model HW001 can be used for both pop-top and full height vans.**

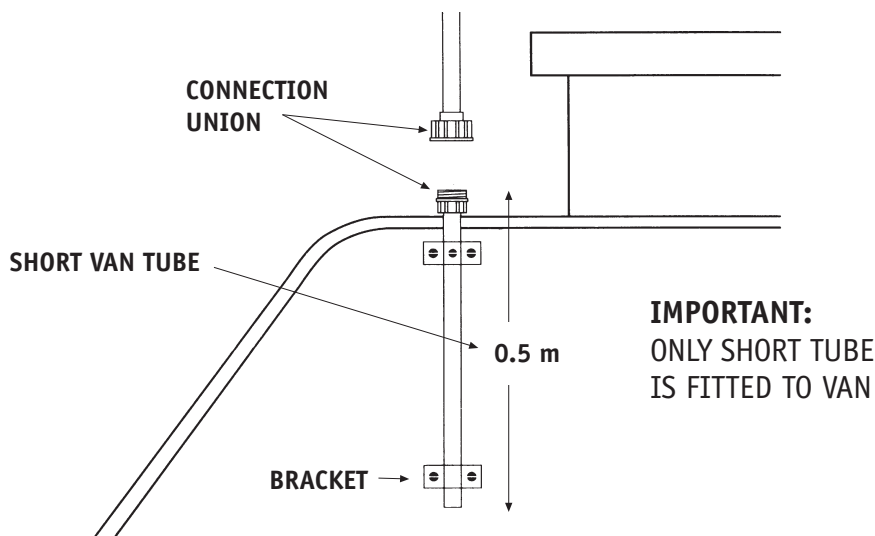

## FITTING INSTRUCTIONS FOR MODEL DX2700

Full fitting instructions are supplied in the antenna accessory kit at purchase.