




Screen Room Installation Instructions

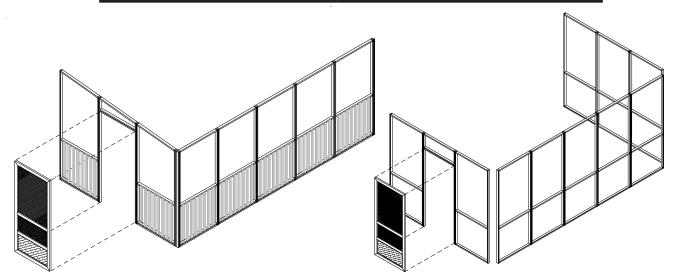

- 1) Each enclosure sections is numbered with Section 1 being located on the left side facing the house.
- 2) L-Angle installation—Mount the angle on the outside and frame in the opening on both sides, top and bottom. Mount the angle using screws when on wood or anchors when on brick or concrete. Cut the bottom angle to allow space for any door openings you might have. You may want to assemble the complete wall section to see how everything fits before mounting the angle.
- 3) Assemble the complete wall section by snapping each section together as shown.

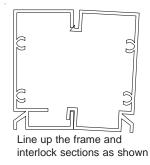

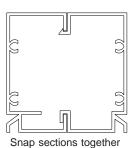


- 4) Place the complete wall section against the angle with the screen cloth to the outside and fasten using one of the suggested installation methods shown on the next page.
- 5) Continue these steps around the perimeter of your enclosure until you have completely enclosed the desired area.

The above instructions are just general instructions to help show some of the different ways to install an enclosure. Additions instructions are included for door installation.


If you have any suggestions on improvements to our instructions please feel free to share them with us. Thank you for using Breeze-Way Patio Screen Enclosures.



Extruded Materials

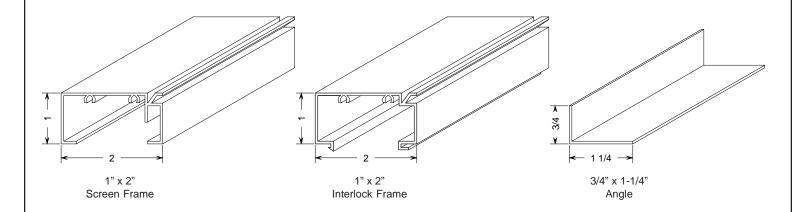

Installation Options

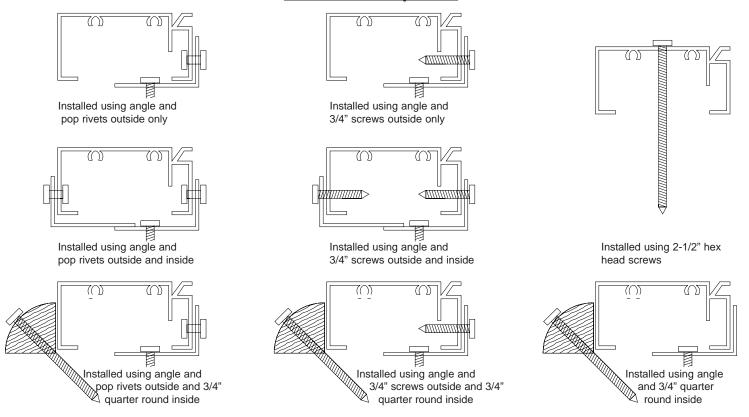

Screws and angle are sold separately - the quarter round installations are shown as an alternate way to install enclosures and are available at lumber suppliers.