

Timber

COLLECTION 2018 - 2019 AUSTRALIA

# The start of something beautiful







#### Welcome

- **04** Discover our passion for wood
- 06 Authentic beauty meets easy living
- 08 Authentic beauty that lasts a life time

#### Collection

- 10 Create your own living space
- 14 Let us guide you to the perfect floor
- 16 Range overview
- 18 The details make the difference
- 20 Discover the full timber collection

#### Installation

- 24 Install your floor without a hassle
- 25 Underlay is not an idle luxury

#### Finishing

**26** Finish beautifully

#### Maintenance

28 Keep your floor in top condition

#### Matching accessories guide

Cover photo PAL3562

# Discover our passion for...





# artisan characteristics

Saw cuts are tangible evidence of pure craftsmanship. The manually applied saw cuts vary both in depth, width and frequency. Not a single plank is identical!





Some of our floors look as matte as untreated wood, and are also easy to maintain.

# wooden textures

A brushed finish accentuates the natural grain of the wood and creates an extra authentic feel.

# **Authentic beauty** meets easy living



# Maximum pleasure, easy maintenance



All Quick-Step timber floors are finished with an advanced lacquer to give your floor added resistance to wear, marks and scratches. The new waterrepellent Protect+ technology also helps to prevent water from penetrating

between joins of your floor as this often makes joins look tired or stained. This helps to keep the joins between the planks looking as good as new. Thanks to the unique combination of this new technology and our authentic floor designs, you will be able to enjoy your floor's beauty for years to come.



#### NEW Protect+

With Quick-Step's unique Protect+ technology, your floor will look better for longer. Find out more on p. 8-9.

## Quick-Step Timber, the beauty of nature

100% WOOD Welcome the beauty of nature into your home by choosing a 100% real timber floor from Quick-Step. With a wide choice of different plank sizes and natural colors, you will find the perfect

floor for your style and interior. We pay extra attention to the knots, grain and colour of the planks so you get to enjoy the warmth of a handcrafted wooden floor.





# A perfectly installed floor is just a few clicks away

A timber floor that's easy to install? Quick-Step makes it possible. Whether you decide to do it yourself or have it done by a professional, your new floor can be installed in no time, thanks to the Uniclic® Multifit system. This click system enables you to click the planks together, using three different methods. Visit www. quick-step.com.au for more information.

Another great advantage of Quick-Step timber floors: there's no need for post-installation work in order to start living on your floor. No sanding, no dust, no varnishing, oiling or painting. As soon as your Quick-Step Timber floor is installed, it's yours to enjoy for years to come.







#### How to install your timber floor

Installing a Quick-Step Timber floor is very easy. Let us help you out with our installation videos at bit.ly/ytquickstep



# **Authentic beauty that** lasts a lifetime

If you're opting for a wooden floor, you'll want to retain its authentic beauty for as long as you can. Timber floors from Quick-Step have been designed with exactly this in mind!

#### High-quality lacquer finish

Sliding chairs, high heels, kids... Floors go through a lot. That's why Quick-Step timber floors have an additional, high-quality protective layer of lacquer. Whether you opt for the light glossy or typical matte look of untreated wood, your floor will be better protected against wear and tear, marks and scratches.

NEW Unique, water-repellent bevel technology Protect+



Spilled something? No need to panic! Maintaining your timber floor has never been so easy. Quick-Step Timber floors feature a unique, water-repellent technology in the form of Protect+. There's no need to worry if you spill something or while cleaning, as Protect+ stops fluids from penetrating and staining the edges

Looking for a floor that is easy to maintain? A Quick-Step Timber floor is just what you're looking for.

of planks, keeping the joins between the planks clean and looking fresh for years to come.











WITHOUT PROTECT+ TECHNOLOGY

# Create your own living space

A beautiful interior starts with a good foundation. Whatever your style, whatever your room, Quick-Step has the right floor: from light, sleek floors to warm brown classics and even reclaimed floors with knots and cracks.







Wouldn't it be great if you could try out several floors first before making a final decision? With the online 'RoomViewer' tool, you can do just that. Get lifelike previews and make sure that your final decision is the right one. Simply upload a photo of the area to be installed and virtually install any of our floors into your own home!

Try it out now!

Launch the RoomViewer at

www.quick-step.com.au









Did you know that Quick-Step Timber floors have an abrasion resistance greater than most of the competition? This is achieved through the high quality of our specially designed European lacquer and its unique application.













Let us guide you to the perfect floor

Choosing a new floor can raise a lot of questions: which colour should I go for? Which floor matches my style and my interior? Check out our FloorExplorer and RoomViewer online – we will help you make up your mind.

# FLOOR EXPLORER

#### 3 EASY STEPS TO FIND YOUR PERFECT FLOOR

With so many flooring options to choose from, making the right decision can be a challenge. That's why we have introduced the online FloorExplorer tool: in three simple steps, you will get a selection of floors that perfectly match your personal needs and style.

Why not give it a try?
Enter the FloorExplorer at
www.quick-step.com.au

SELECT A ROOM 2 CHOOSE A COLOUR

3 DEFINE YOUR STYLE



# ROOM VIEWER

## **GET A PREVIEW OF YOUR FAVOURITE FLOORS**

Wouldn't it be great if you could try out several floors first before making a final decision? Or even preview them in your own interior? With the online RoomViewer tool, you can do just that. Get lifelike previews and make sure that your final decision is the right one.



Try it out now!
Launch the RoomViewer at
www.quick-step.com.au



#### DISCOVER YOUR PERFECT FLOOR ON WWW.QUICK-STEP.COM.AU


# Range overview

dimensions **READYFLOR XL** 220 x 18.6 cm 1 strip **READYFLOR - AUSTRALIAN**  $182 \times 13.4$  cm 1 strip **READYFLOR - INTERNATIONAL**  $182 \times 14.5$  cm 1 strip **READYFLOR** 182 x 18.6 cm **READYFLOR** 220 x 19 cm 3 strip **PALAZZO** 1 strip **VARIANO** 220 x 19 cm multistrip (styles may vary) 182 x 14.5 cm **COMPACT** 

182 x 13 cm

# Product build-up

1 strip

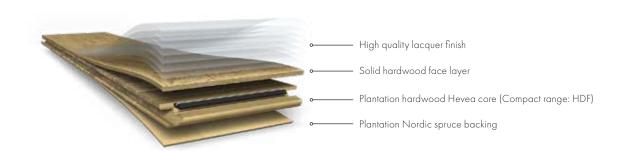

	thickness	grooves	build-up	pack	warranty
	<u>≑</u> 14 mm	- <sup>4</sup> -	Inomined 3 mm	6 x = 2.455 m <sup>2*</sup>	UPETIME WARRANTY  COMETY OF
	<u>≑</u> 14 mm	<b>⋄</b>	Inomined 3 mm	6 x = 1.464 m <sup>2*</sup>	UFFTIME WARRANTY COMETY OF
	<u>÷</u> 14 mm	<b>⋄</b>	Inomined 3 mm	6 x = 1.583 m <sup>2*</sup>	UPETIME WARRANTY COMMITCION  C
	<u>÷</u> 14 mm	<b>~</b>	Inominal 3 mm	6x = 2.031 m <sup>2</sup>	UPETIME WARRANTY SOMETY: OUE  UPETIME WARRANTY SOMETY: OUE  OUNCE
	<u>÷</u> 14 mm	<b>~</b>	Inominal 3 mm	6 x = 2.508 m <sup>2*</sup>	UPETIME WARRANTY SOMETICOR  UPETIME WARRANTY SOMETICOR  OMETICOR
	<u>÷</u> 14 mm	2/4	I nomined 3 mm	6 x = 2.075m <sup>2*</sup>	UPETIME WARRANTY SOMETIC VOE  25 YEAR WARRANTY SOMETIC VOE SOMETIC
	<u>÷</u> 14 mm	<b>~</b>	Inominol 3 mm	6 x = 2.508m <sup>2*</sup>	UPETIME WARRANTY SOMETHY VOE  OMETHY VOE
:	<u>÷</u> 12.5 mm	<sup>2</sup> ~	Inomined 2.5 mm	6 x = 1.583 m <sup>2</sup> /1.419m <sup>2**</sup>	25 WARRANTY BOMESTIC USE  25 YEAR WARRANTY COMESTIC USE  OMESTIC USE

**Please note:** Many 1 strip products feature shorter boards. At Quick-Step, we know that when you want a stunning 1 strip floor, you don't want it full of short boards, that's why we minimise our short boards ratio lower than almost every other brand to give you the look you deserve. Our balance of short boards adds authenticity to your floors. This costs a little more, but looks so much better. Another great reason to buy a Quick-Step floor.









All timber ranges are PEFC certified, except ReadyFlor, which is sourced from sustainable forestry

<sup>\*</sup> up to 4 shorter boards per pack

<sup>\*\*</sup> up to 6 shorter boards per pack

## The details make the difference

Each timber floor has its own story and a unique look and feel. The Quick-Step designers carefully select the structure, treatment, finishing and bevel, perfectly in line with the character of each floor design.

## Types of wood



#### Blackbutt

Blackbutt is an Australian hardwood with excellent hardness. It may contain prominent gum veins, insect marks as well as some fine surface cracks. Not recommended with heated subfloors



#### Tasmanian Oak

Tasmanian Oak is a blend of pink/straw coloured hardwood species of moderate hardness from Tasmania. Some small surface splits or surface checks are an occasional characteristic of Tasmanian Oak.



#### Spotted Gum

Spotted Gum is an Australian hardwood with wide colour variation and excellent hardness. It may contain some fine surface cracks. This wood species is not recommended with heated subfloors.



#### Sydney Blue Gum

Sydney Blue Gum is an Australian hardwood with wide colour variation and excellent hardness.



#### A Jarrah

Jarrah is a very durable hardwood from WA, which ranges in colour from pale pink/grey to deep reds. It will darken, turning a deeper red and more uniform in colour.




#### Oak

Oak is the most popular hardwood flooring product in the world. It ranges in colour from pale straw to mid brown and offers distinctive and desirable grain patterns.



#### Merbau

Merbau is a reddish brown hardwood of excellent durability from South East Asia. It often contains a small yellowish fleck in the grain.





The rating is a measure of the resistance of the wood to indentation. The higher the number, the more indentation resistant the timber.

## **Finishing**

All Quick-Step Timber floors are prefinished in the factory, which means no oiling or lacquering is needed directly after installation.

#### Lacquered finish

\_\_\_\_\_\_\_ Extra matt


A Matt

Low Sheen





- Highly scratch and wear resistant.
- Protects against household chemicals.
- Easy to clean wooden floor.

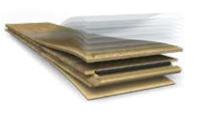

\_\_\_\_\_\_\_ Extra matt finish NEW



The extra matt lacquer finish combines the look of an untreated floor with the advantages of a lacquered floor.

# Grading

All Australian wood varieties are graded as per AS2796 Standard and better. This grade includes knots, gum veins, fine cracks, and other natural features of Australian Eucalyptus. For oak we have a unique grading system that sorts our floors into three different categories. It gives you an idea of how your floor will look. Quick-Step Oak flooring is available in 1 of 3 grades:



#### Nature

Wood with small knots. Light ariation in colour and structure.




#### Marquant

Wood with large knots. Lively variation in colour and structure.



#### Vibrant

Wood with large knots and small cracks. Lively variation in colour and structure with a rustic appearance.

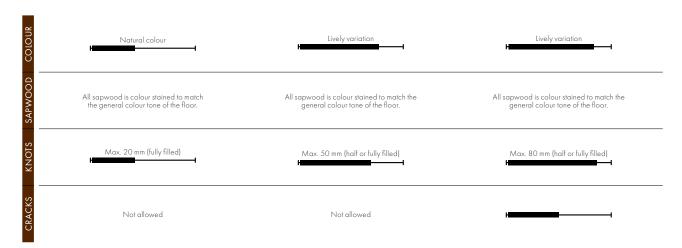

#### **Treatment**



Brushed Deep Brushed

Brushing accentuates the natural grain structure of the wood plank and adds depth.



Saw cuts

Random saw marks show the craftsmanship and character of the wood planks.



Sloping, slightly worn edges create an aged look.



Natural knots

On some floors the knots are not fully filled. Some of them are even manually sanded to emphasize the liveliness of the wood.



Reclaimed look

Our Variano floors are designed with a reclaimed look: showing saw cuts, height differences and small gaps. See p. 23.



#### Design colours

By using different treatment techniques such as fuming and staining, each plank has a unique colour.

#### **READYFLOR**

GMRF22 220 x 19 cm = 14 mm





. ∴ . . TASMANIAN OAK 3 STRIP GMRF22TOH



SPOTTED GUM 3 STRIP



∜⊸∽ JARRAH 3 STRIP




⊹⊹⊸ SYDNEY BLUE GUM 3 STRIP

GMRF18 182 x 18.6 cm = 14 mm



. ∴ -&-BLACKBUTT 2 STRIP GMRF18BBTDP

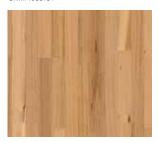

⊹⊹⊸ TASMANIAN OAK 2 STRIP
GMRF18TODP



. □ • SPOTTED GUM 2 STRIP



⊹⊹⊸ JARRAH 2 STRIP



☼❖ SYDNEY BLUE GUM 2 STRIP

GMRF18 182 x 13.4 cm = 14 mm



᠅❖ BLACKBUTT 1 STRIP GMRF18BBTSP



☆-�-TASMANIAN OAK 1 STRIP GMRF18TOSP




**☆-**� SPOTTED GUM 1 STRIP



⊹⊹⊸ JARRAH 1 STRIP



SYDNEY BLUE GUM 1 STRIP GMRF18SBGSP



MBMRF18 182 x 13.4 cm = 14 mm



<u>~</u>~ MATT BRUSHED BLACKBUTT 1 STRIP
MBMRF18BBTSP



<u>~</u> • MATT BRUSHED SPOTTED GUM 1 STRIP

<sup>&</sup>quot; Subject to availability

**MRF22** 220 x 19 cm = 14 mm



**₩ % MERBAU 3 STRIP** MRF22MH

MRF18 182 x 18.6 cm = 14 mm



MERBAU 2 STRIP

MRF18 182 x 14.5 cm = 14 mm



The widest & longest Australian timber planks Grading per AS2796 standard and better

MERBAU 1 STRIP

#### **READYFLOR XL**



MATT BRUSHED BLACKBUTT 1 STRIP\*
RFXLBBTSP



MATT BRUSHED SPOTTED GUM 1 STRIP\*



Treatment: Brushed Deep brushed Saw cuts One Timeworn Natural knots Reclaimed look Value Design colours

**PALAZZO** Elegant oak planks



FROZEN OAK EXTRA MATT

PAL3562 VIBRANT



METALLIC OAK EXTRA MATT



CLAY BROWN OAK EXTRA MATT



PURE OAK MATT



FOSSIL OAK MATT

PAL1342 NATURE



MOCCA OAK MATT

PAL1348 MARQUANT



VINTAGE OAK MATT

PAL1344 MARQUANT



<del>\_\_</del> @ <del>\_\_</del> ~ LIMED GREY OAK MATT

PAL1345 MARQUANT



WINTER STORM OAK EXTRA MATT

PAL3842 MARQUANT



<del>\_\_</del> @ <u>\_</u> ~

OLD GREY OAK MATT





Remember that every wood floor is different, and will always vary from any images or samples in colour grain and features. The illustrated patterns and colours are only an image and not a full overview of all the different nuances within the natural unique design of a wood floor. For a representative view of the surface structure and variation of a plank, take a look at the big samples on display and ask your retailer for more advice.



PAINTED WHITE OAK EXTRA MATT MARQUANT



CHAMPAGNE BRUT OAK EXTRA MATT MARQUANT



ROYAL GREY OAK EXTRA MATT MARQUANT



ESPRESSO BLEND OAK EXTRA MATT MARQUANT

#### **COMPACT**

\*COM (AUSTRALIAN)





WINTRY FOREST OAK EXTRA MATT COM3845 MARQUANT



CREAMY WHITE OAK EXTRA MATT COM3851 MARQUANT



PURE OAK EXTRA MATT COM3849 MARQUANT



Planks with a renovation friendly thickness


NATURAL OAK EXTRA MATT COM3844 MARQUANT



<u></u> CLIFF GREY OAK EXTRA MATT COM3850 MARQUANT



SLATE GREY OAK EXTRA MATT COM3846 MARQUANT

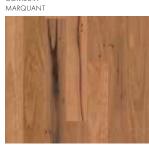

<u>~</u> ~ \* BLACKBUTT COM3858 PER AS2796 STANDARD AND BETTER



SPOTTED GUM COM3859 PER AS2796 STANDARD AND BETTER

# STEP 1 INSTALLATION

# Install your floor without a hassle!

Laying a Quick-Step floor is so easy thanks to the patented world-famous Uniclic® Multifit click system. This system is highly user-friendly, quicker to install and a lot more solid than other systems. A Quick-Step floor makes installation easy, even in the tightest corners or under doors.

# 1 Effortless installation, thanks to the Uniclic® Multifit click system

Quick-Step is the inventor of the Uniclic® Multifit installation system, today the standard click-to-install system. Use this revolutionary and patented click system to effortlessly click your floor planks together.

# 2 Install your floor anywhere, even on floor heating

Quick-Step Timber floors are perfect for installing over floor heating when combined with the right underlay. Some species are not suitable, see page 18.

#### 3 Watch the videos

See for yourself how easy it is to install a Quick-Step floor in our installation videos. Discover them on www.quick-step.com.au.





#### Installation tools

Install your timber floor in an easy and professional way with the handy Quick-Step installation tools.





#### Quick-Step® **HANDSAW**

Handy handsaw used to undercut door frames.



# Quick-Step® INSTALLATION KIT

Includes a special Uniclic® tapping block, pulling tool and spacing wedges.



For a perfect installation, check out the installation videos on www.quick-step.com.au




# Underlay is not an idle luxury



#### CLICK on timber

Installing your timber floor is easy thanks to the patented Uniclic® Multifit click system. A good underlay has a major impact on the final look, walk sound, quality and comfort of your Quick-Step Timber floor.

- · Maintain their initial thickness over the years and provide excellent acoustic insulation, keeping your floor quieter underfoot.
- · Levels and helps to prevent small irregularities.
- Comes with a self-adhesive strip and a pre-integrated damp proof membrane (DPM) which protects your floor from rising damp, with a water vapour resistance of greater than SD>75m, meeting all European recommendations.
- Suitable for floor heating and/or cooling.
- Offers a stable base which supports your floor in instances of dropped items or temporary heavy loads.

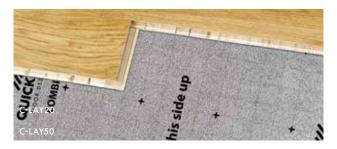

# Quick-Step® COMBI-LAY STANDARD

Contents: 1 roll = 20 or 50  $m^2$ Thickness: 2 mm

Combi-Lay Standard is no normal underlay. The dense, closed cell polyolefin foam provides excellent support, with good reduction of both reflected and impact noise.



For the best results always start with a level subfloor. Make sure it's completely dry as well. For more advice about preparing your subfloor, visit www.quick-step.com.au or your local Quick-Step retailer.



#### **GLUE**

Quick-Step Timber can also be glued down using Quick-Step Parquet Adhesive.

- Spreads easily and guarantees great adhesion.
- Suitable for floor heating and/or cooling.

**Please note:** Contact your Quick-Step retailer for more details on gluing a Quick-Step Timber floor.



# Quick-Step® QUIET-STEP COMBI-LAY

Contents: 1 roll = 20 or 50 m<sup>2</sup> Thickness: 2 mm

Quiet-Step Combi-Lay is the first choice where a quiet walking sound and maximum reduction in multi-storey noise is required. This high density underlay has no match when it comes to reducing foot fall noise, with a reduction of up to 30% over standard underlays. Ideal for installation in multi-storey apartments where noise transfer can be an issue.



# Finish beautifully

Finish your floor beautifully with the Quick-Step scotia and profiles.

# Finishing profiles for floor and stairs

Quick-Step's Incizo® profile is a multifunctional finishing tool. The same profile can be used for all the finishes of your floor and stairs, in the matching colour. Simply cut the Incizo® basic profile to the shape required using the special cutter supplied in every Incizo pack.

#### Quick-Step® Incizo®: five questions, one answer



1 How can I join two floors 2 How can I solve variations 3 How do I finish my floor of the same height?

in height from one floor to another?

along a wall or a window?

4 How can I connect my floor to a carpet, and have a beautiful finish?











Use the Incizo® profile cut as an adapter profile.









Use the Incizo® profile cut as a transition profile.





For safety reasons, always glue the floor panels on the stairs of your staircase.

#### 5 What about the finishing of my stairs?

You can cover your stairs or steps with Quick-Step planks and finish in the style of your choice using the Incizo® profile as a stair nose. Remember to order the Incizo aluminium sub-profile for stair installations.









Quick-Step®
INCIZO® PROFILE
QSWINCP(-)
215 cm x 5.4 cm x 1.7 cm
Contents: 1 Incizo®, 1 cutter, 1 plastic rail, screws and plugs



NEWINCPBASE(-) 215 cm x 1.9 cm x 7.35 cm To be ordered separately.

The Incizo® stairs finishing cannot be used for commercial applications.



Discover our installation videos on www.quick-step.com.au

#### Scotia



Quick-Step® SCOTIA 240 x 1.7 x 1.7 cm

The veneer timber scotia is perfect for covering expansion gaps along skirting boards.

# Skirting



# Quick-Step® FLEXIBLE SKIRTING

 $700 \times 1.4 \times 4$  cm (to be cut to the desired length)

A beautiful finish for round pillars or curved walls.

# STEP 3 CLEANING

# Keep your floor in top condition

#### Clean



# Quick-Step® CLEANING KIT

**QSCLEANINGKIT** 

Contents: mop holder, washable microfibre mop, Quick-Step Cleaning product 750ml

All Quick-Step cleaning products are specifically developed for Quick-Step floors. They cleanse the floor surface thoroughly and maintain the original look of your floor. No residual layers of cleaning product are left behind. Naturally, wood flooring will mark and scratch when items are dragged across or dropped onto the surface. However proper maintenance will keep your floor looking better for longer.

Also available separately: Quick-Step® CLEANING PRODUCT



### Repair



# Quick-Step® REPAIR KIT

QSREPAIR

Contents: melting knife, cleaning comb, 7 wax blocks, sanding pad

Light damages can easily be repaired in the original colour with the Repair Kit. Simply recreate the colour of your damaged planks with one of the seven wax pieces selected to cover all Quick-Step colours. Check the specific colour combination for your floor on www.quick-step.com.au




Watch our repair movie showcasing how to repair your timber floor.



Tips to keep your floor in top condition: Placing dirt trapping mats at external entrances and felt floor protectors under all furniture is recommended. Where possible, use rubberised castors and wheels designed for hard flooring and vinyl chair mats under castor wheels and office chairs. Remove small stones and grit with a soft bristle broom or vacuum to help prevent scratching. Quick-Step Timber should also be protected from excessive heat and sunlight. The use of steam mops and stiletto heels should also be avoided at all times. For regular maintenance, use the Quick-Step Timber Cleaning Kit for best results. (For full maintenance guidelines go to www.quick-step.com.au)

# There is no substitute for quality

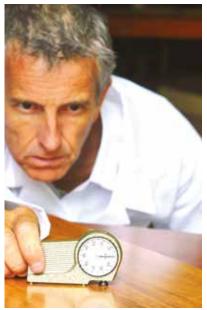


When looking at any pre-finished timber floor it is important to pay serious attention to the wear resistance of the coatings used. After all, it is the coating that will afford protection to the timber surface of your floor and the better the quality of the finish used, the longer your floor will look its very best.

Wear resistance, or abrasion resistance, is tested using a taber abrasion machine that simulates day to day wear of the coating system. Taber testing is universally recognised as the best testing method to evaluate the wear performance of a floor covering. In essence, the better the abrasion resistance, the longer your floor will hold its initial gloss level and the longer the coating will last before wearing through to raw timber.

Most competitors use a standard "off the shelf" finish that wears reasonably well, but that's simply not good enough for the designers at Quick-Step.

SRT Finish is a specifically formulated, high performance lacquer that has been developed in Europe and used on all lacquered Quick-Step Timber floors. Laboratory tests clearly demonstrate that Quick-Step's SRT Finish outperforms the competitors, ensuring that when you choose a Quick-Step floor, you are selecting a timber floor with only the best available pre-finished coatings available. What's more, SRT is able to be re-coated using a wide selection of local finishes, meaning trouble free maintenance when it comes time to replenish the coated surface of your floor in years to come.

#### A heart for nature

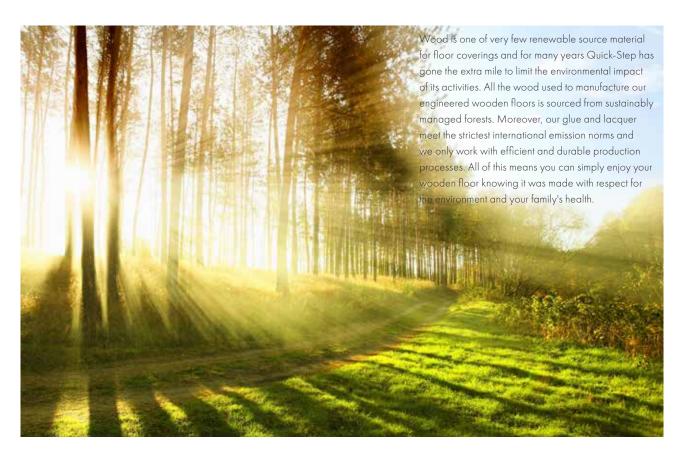

- ☑ More than 75% recycled, sustainable wood
- We use carefully screened raw materials
- ☑ We invest in energy-efficient production

# Matching Accessories Guide

Flawlessly matching accessories are available in all Quick-Step timber products. Quick-Step is committed to perfecting all aspects of flooring by meticulously colour-matching trims and profiles for all applications including stairs across all timber ranges.

	Product code	Product description	Quick-Step Scotia More info see page 27	Quick-Step Incizo® More info see page 26-27
ReadyFlo	or 1-strip			
	GMRF18BBTSP	BLACKBUTT	QSWSCOT01871	QSWINCP01871
	GMRF18TOSP	tasmanian oak	QSWSCOT01874	QSWINCP01874
· FAR	GMRF18SGSP	SPOTTED GUM	QSWSCOT01872	QSWINCP01872
DVS	GMRF18JSP	JARRAH	QSWSCOT01873	QSWINCP01873
-	GMRF18SBGSP	SYDNEY BLUE GUM	QSWSCOT01875	QSWINCP01875
	MBMRF18BBTSP	MATT BRUSHED BLACKBUTT	QSWSCOT01865	QSWINCP01865
THE PARTY NAMED IN	MBMRF18SGSP	MATT BRUSHED SPOTTED GUM	QSWSCOT01866	QSWINCP01866
	MRF18MSP	MERBAU	<b>QSWSCOT</b> 01357	<b>QSWINCP</b> 013 <i>57</i>
?eadvFla	or 2-strip			
	GMRF18BBTDP	BLACKBUTT	QSWSCOT01871	QSWINCP01871
	GMRF18TODP	tasmanian oak	QSWSCOT01874	QSWINCP01874
100	GMRF18SGDP	SPOTTED GUM	<b>QSWSCOT</b> 01872	QSWINCP01872
E AS	GMRF18JDP	JARRAH	QSWSCOT01873	QSWINCP01873
	GMRF18SBGDP	SYDNEY BLUE GUM	QSWSCOT01875	QSWINCP01875
8 -	MRF18MDP	MERBAU	<b>QSWSCOT</b> 013 <i>57</i>	<b>QSWINCP</b> 013 <i>57</i>
leadyFlo	or 3-strip			
	GMRF22BBTH	BLACKBUTT	<b>QSWSCOT</b> 01871	QSWINCP01871
	GMRF22TOH	tasmanian oak	QSWSCOT01874	QSWINCP01874
	GMRF225GH	SPOTTED GUM	QSWSCOT01872	QSWINCP01872
	GMRF22JH	JARRAH	<b>QSWSCOT</b> 01873	QSWINCP01873
	GMRF22SBGH	SYDNEY BLUE GUM	QSWSCOT01875	QSWINCP01875
	MRF22MH	MERBAU	<b>QSWSCOT</b> 01357	QSWINCP01357
ReadyFla	or XL 1-strip			
May 1	RFXLBBTSP	BLACKBUTT	<b>QSWSCOT</b> 01865	QSWINCP01865
X1 100	RFXLSGSP	SPOTTED GUM	<b>QSWSCOT</b> 01866	QSWINCP01866

	Product code	Product description	Quick-Step Scotia More info see page 27	Quick-Step Incizo® More info see page 26-27
Palazzo				
116/1	PAL1341	PURE OAK MATT	QSWSCOT01341	QSWINCP01341
	PAL1342	FOSSIL OAK MATT	QSWSCOT01342	QSWINCP01342
	PAL1344	VINTAGE OAK MATT	QSWSCOT01344	QSWINCP01344
18 11	PAL1345	LIMED GREY OAK MATT	QSWSCOT01345	QSWINCP01345
	PAL1346	OLD GREY OAK MATT	QSWSCOT01346	QSWINCP01346
E PAR	PAL1348	MOCCA OAK MATT	QSWSCOT01348	QSWINCP01348
	PAL3562	frozen oak extra matt	QSWSCOT03562	QSWINCP03562
le le	PAL3842	WINTER STORM OAK EXTRA MATT	QSWSCOT03842	QSWINCP03842
1. 1	PAL4117	CLAY BROWN OAK EXTRA MATT	QSWSCOT04117	QSWINCP04117
	PAL4118	METALLIC OAK EXTRA MATT	QSWSCOT04118	QSWINCP04118
Variano	VAR3445H	PAINTED WHITE OAK EXTRA MATT	<b>QSWSCOT</b> 01629	<b>QSWINCP</b> 01629
CONTRACT OF	VAR3446H	CHAMPAGNE BRUT EXTRA MATT	<b>QSWSCOT</b> 01630	QSWINCP01630
	VAR3447H	ROYAL GREY OAK EXTRA MATT	<b>QSWSCOT</b> 01631	<b>QSWINCP</b> 01631
	VAR3448H	ESPRESSO BLEND OAK EXTRA MATT	<b>QSWSCOT</b> 01632	QSWINCP01632
Compact				
A. D.	COM3844	NATURAL OAK EXTRA MATT	<b>QSWSCOT</b> 01334	QSWINCP01334
	COM3845	WINTER FOREST OAK EXTRA MATT	QSWSCOT01340	QSWINCP01340
100	COM3846	SLATE GREY OAK EXTRA MATT	QSWSCOT03846	QSWINCP03846
Afficia	COM3849	PURE OAK EXTRA MATT	QSWSCOT01341	QSWINCP01341
	COM3850	CLIFF GREY OAK EXTRA MATT	<b>QSWSCOT</b> 03017	<b>QSWINCP</b> 03017
	COM3851	Creamy White Oak extra matt	QSWSCOT03098	QSWINCP03098
THE	COM3858	BLACKBUTT	QSWSCOT01865	QSWINCP01865
1	COM3859	SPOTTED GUM	QSWSCOT01866	QSWINCP01866

# Timber

#### **COLLECTION 2018 - 2019**











#### Too many options to choose from?

Not sure which floor is your absolute favourite? The RoomViewer helps you make your choice. Try out your options on www.quick-step.com.au



#### Choose a Quick·Step® Master Installer

Once you have chosen the perfect Quick-Step floor, your installation is the next important step. Choose a Quick-Step Master Installer who will install your floor to the highest standard and with the necessary attention to detail it deserves. Even more, the Quick-Step Master Installers offer a liftetime installation warranty. Find a Master Installer in your area on www.quick-step.com.au



#### Quick·Step® is brought to you by Premium Floors Australia

New South Wales Tel.: (02) 9982 3777 Victoria & Tasmania Tel.: (03) 9798 0808 Queensland Tel.: (07) 3273 3111 South Australia & Northern Territory Tel.: (08) 8262 8666 Western Australia Tel.: (08) 9240 1966 Commercial division Tel.: (03) 9798 0808

Your Quick-Step® point of sale



#### **FOLLOW US ON**

www.facebook.com/QuickStepFloors www.youtube.com/quickstepfloor www.youtube.com/PremiumFloorsAU

🖇 plus.google.com/+quickstep 👂 www.pinterest.com/quickstepfloor 🔰 @QuickStepFloor



