


# STRAIGHT BRACKET INSTALLATION INSTRUCTIONS


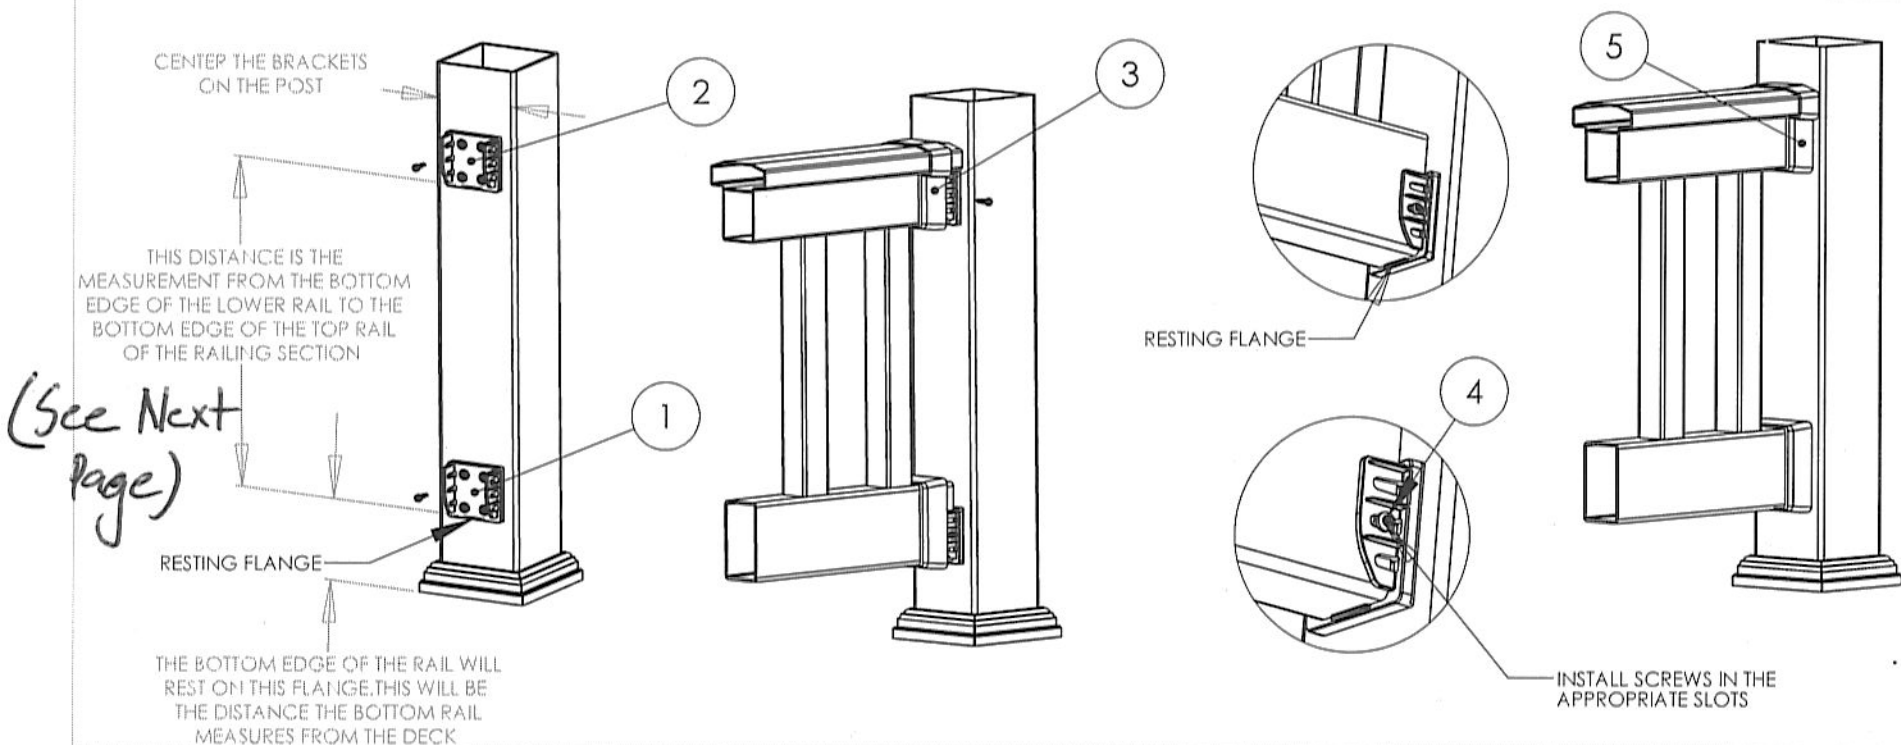


- 1 - USING FOUR OF THE SUPPLIED SCREWS, INSTALL THE LOWER MOUNTING PLATE ON TO THE POST. THE MOUNTING PLATES SHOULD BE CENTERED ON THE POST WITH THE RESTING FLANGE AT THE REQUIRED DISTANCE FROM THE DECK.
- 2 - REPEAT THIS PROCEDURE ON THE UPPER MOUNTING PLATE. KEEP THE DISTANCE BETWEEN THE LOWER RESTING FLANGE TO THE UPPER RESTING FLANGE THE SAME AS THE DISTANCE BETWEEN THE BOTTOM RAIL LOWER EDGE TO THE TOP RAIL LOWER EDGE. REPEAT STEPS 1 AND 2 ON THE OPPOSING POST.
- 3 - SLIDE THE BRACKET COVERS ONTO THE RAILING SECTION. INSTALL THE ENTIRE RAILING SECTION INTO THE MOUNTING PLATES, MAKING SURE THE RAILS SIT ON THE RESTING FLANGES.  
NOTE: THE RAILING SECTION SHOULD BE CUT  $\frac{3}{8}$ " SMALLER THAN THE DISTANCE BETWEEN THE POSTS.
- 4 - INSTALL TWO OF THE THE SUPPLIED SIDE SCREWS INTO EACH MOUNTING PLATE (ONE ON EACH SIDE) CHOOSING THE BEST SLOT LOCATION TO MAKE SURE THE SCREWS ENGAGE INTO THE STIFFENER IN THE RAIL. THE MOUNTING PLATES ARE SLOTTED TO ALLOW FOR THERMAL EXPANSION AND CONTRACTION.
- 5 - SLIDE THE COVERS TOWARDS THE POST UNTIL THEY SNAP ONTO THE MOUNTING PLATES. YOU WILL HEAR AN AUDIBLE "CLICK".



MIDWEST  
VINYL  
PRODUCTS, INC.


OUTDOOR LIVING AT ITS BEST

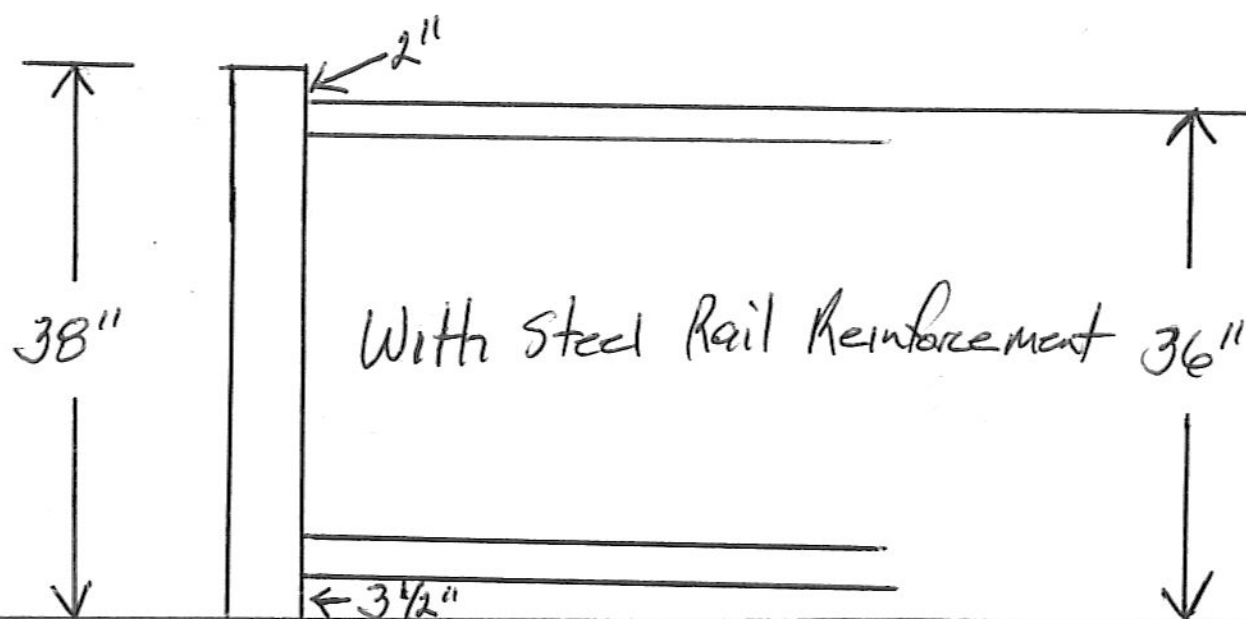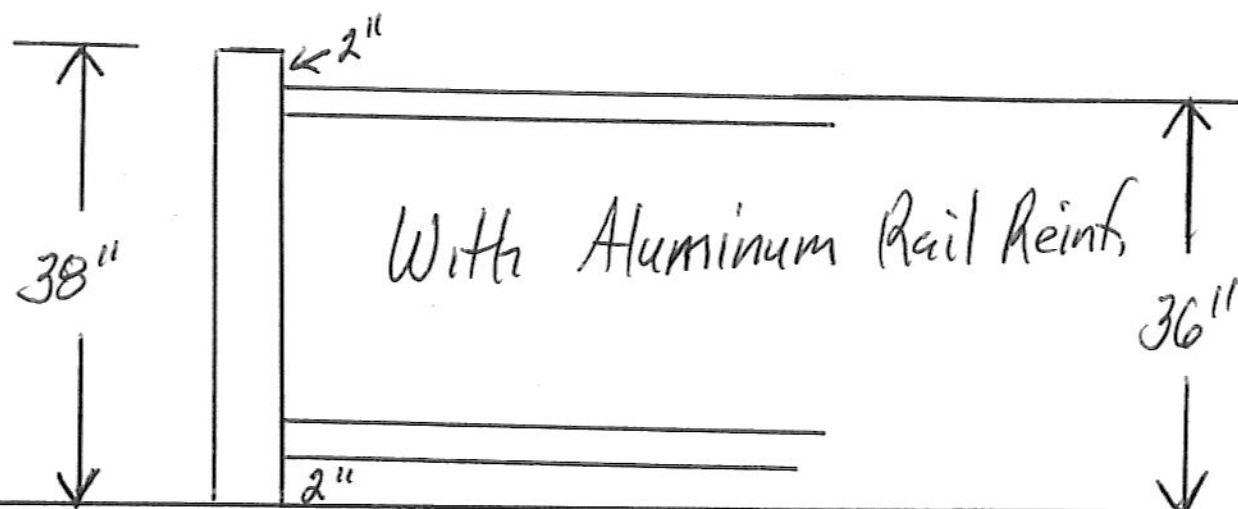


For 36" Railing with LMT Brackets

# STAIR BRACKET INSTALLATION OPTIONS

## T-RAIL INSTALLATION

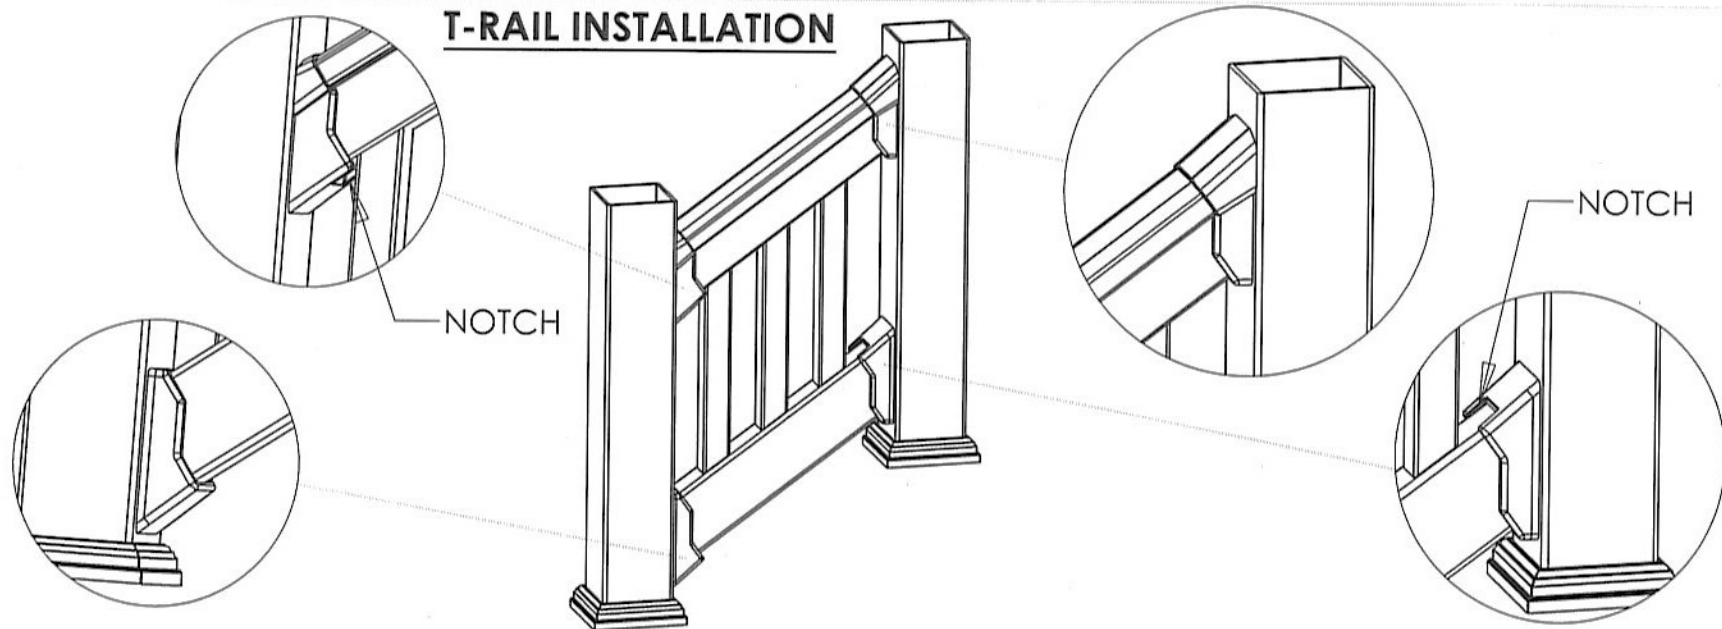


## 2 X 3-1/2 INSTALLATION

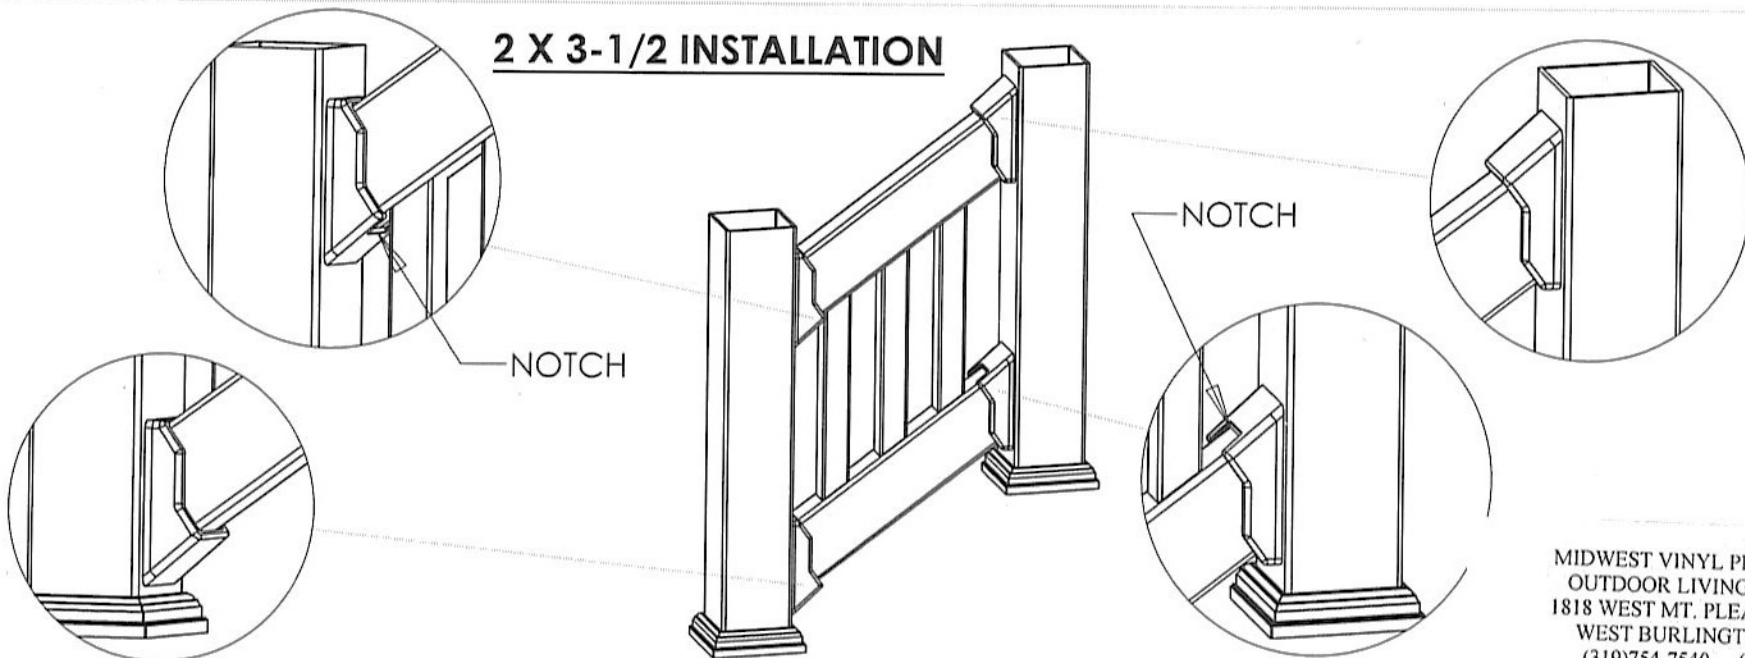

MIDWEST VINYL PRODUCTS, INC.  
OUTDOOR LIVING AT ITS BEST  
1818 WEST MT. PLEASANT STREET  
WEST BURLINGTON, IA 52655  
(319)754-7540 - (800)782-3624

# STAIR BRACKET INSTALLATION INSTRUCTIONS

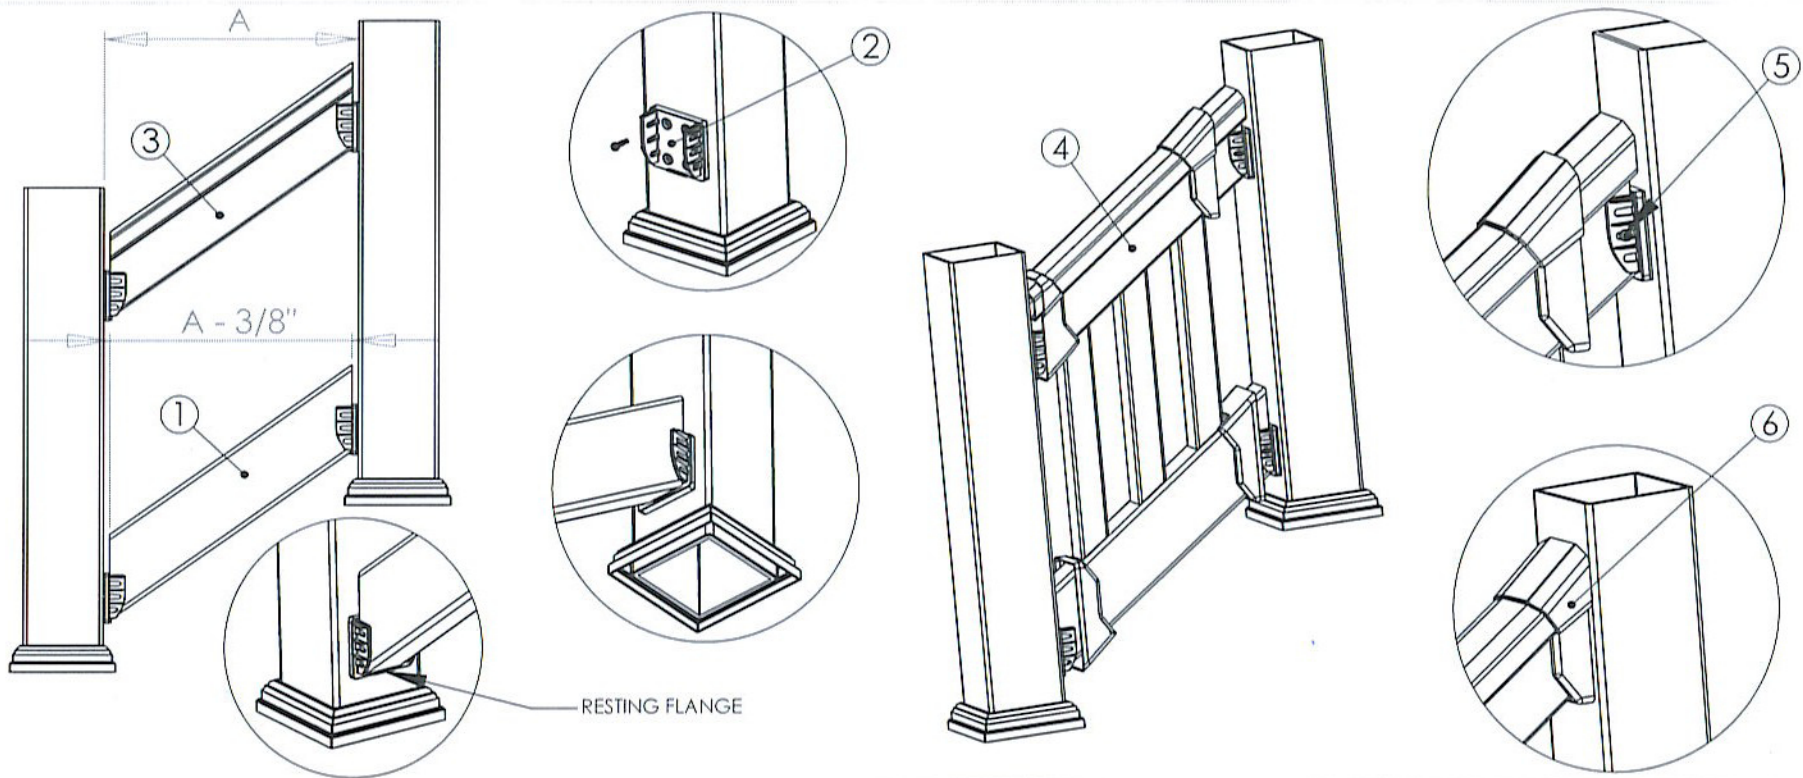


- 1 - CUT THE BOTTOM RAIL TO THE DESIRED LENGTH AND ANGLE TO MATCH THE STAIR ANGLE AND THE DISTANCE BETWEEN THE STAIR POSTS MINUS 3/8". PLACE A MOUNTING PLATE ON EACH END OF THE RAIL, MAKING SURE THE BOTTOM OF THE RAIL SITS ON THE RESTING FLANGES. TEMPORARILY PLACE INTO POSITION AT THE DESIRED DISTANCE ABOVE THE TREAD RISERS. MARK THE LOCATIONS OF THE BOTTOM OF EACH MOUNTING BRACKET, THEN REMOVE THE RAIL.
- 2 - USING FOUR OF THE SUPPLIED SCREWS, INSTALL THE LOWER MOUNTING PLATES BY CENTERING THEM ON THE POSTS WHILE ALIGNING THEM WITH THE LOCATION MARKS CREATED IN STEP ONE.
- 3 - REPEAT STEP 1 AND 2 ON THE UPPER RAIL. THE DISTANCE THE TOP MOUNTING PLATES WILL BE ABOVE THE BOTTOM MOUNTING PLATES WILL BE THE SAME DISTANCE THAT THE BOTTOM OF THE BOTTOM RAIL IS TO THE BOTTOM OF THE TOP RAIL ON THE RAILING SECTION TO BE INSTALLED.
- 4 - SLIDE THE BRACKET COVERS ONTO THE RAILING SECTION AS FAR BACK AS POSSIBLE. INSTALL THE ENTIRE RAILING SECTION INTO THE MOUNTING PLATES, MAKING SURE THE RAILS SIT ON THE RESTING FLANGES.
- 5 - INSTALL TWO OF THE SUPPLIED SIDE SCREWS INTO EACH MOUNTING PLATE (ONE ON EACH SIDE) CHOOSING THE BEST SLOT LOCATION TO MAKE SURE THE SCREWS ENGAGE INTO THE STIFFENER IN THE RAIL. THE MOUNTING PLATES ARE SLOTTED TO ALLOW FOR THERMAL EXPANSION AND CONTRACTION.
- 6 - SLIDE THE COVERS TOWARDS THE POST UNTIL THEY SNAP ONTO THE MOUNTING PLATES. YOU WILL HEAR AN AUDIBLE "CLICK".

MIDWEST VINYL PRODUCTS, INC.  
 OUTDOOR LIVING AT ITS BEST  
 1818 WEST MT. PLEASANT STREET  
 WEST BURLINGTON, IA 52655  
 (319)754-7540 - (800)782-3624



# COMBINATION STRAIGHT BRACKET AND 45 DEGREE OR COLUMN ADAPTER INSTALLATION INSTRUCTIONS

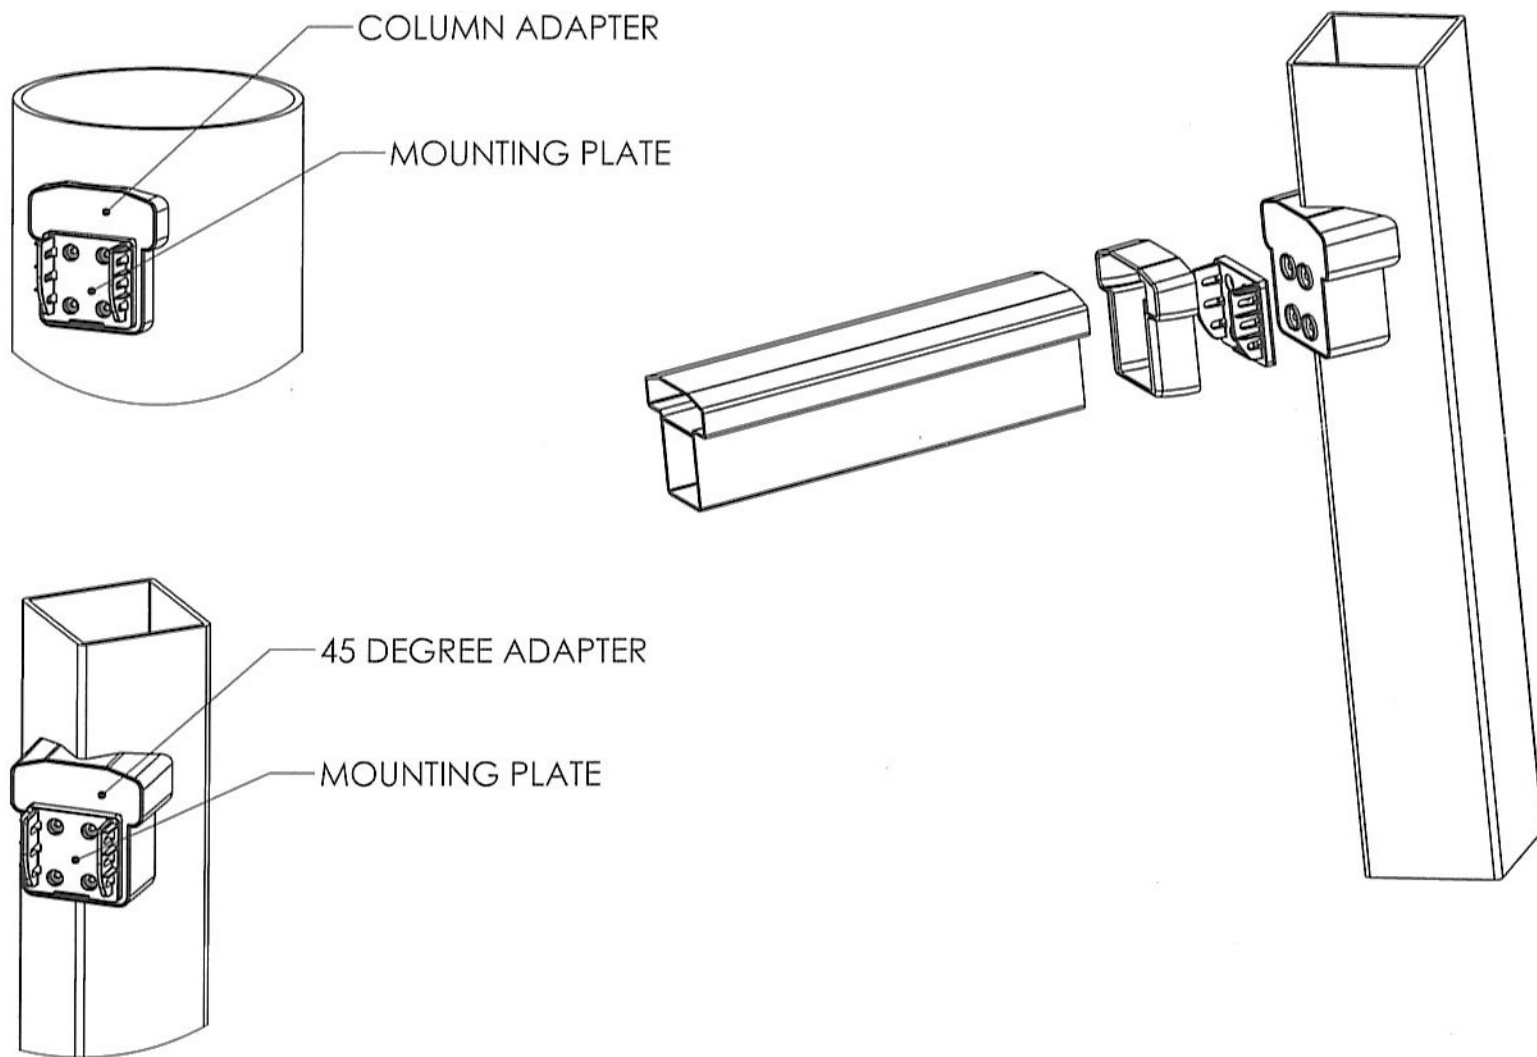

A 45 DEGREE OR A COLUMN CONNECTION CAN BE ACHIEVED BY PLACING A MOUNTING PLATE INTO THE DESIRED ADAPTER AND FOLLOWING THE SAME PROCEDURES AS THE STRAIGHT BRACKET INSTALLATION.

NOTE: LONGER MOUNTING SCREWS MAY BE REQUIRED FOR THESE APPLICATIONS

MIDWEST VINYL PRODUCTS, INC.  
OUTDOOR LIVING AT ITS BEST  
1818 WEST MT. PLEASANT STREET  
WEST BURLINGTON, IA 52655  
(319)754-7540 - (800)782-3624  
[www.midwestvinyl.com](http://www.midwestvinyl.com)