



HAPPY WANDERER CARAVAN ACCESSORIES

WHEEL-ALERT INSTALLATION INSTRUCTIONS SINGLE AXLE TRAILERS

Please read all the following instructions carefully before proceeding with the installation of your new WHEEL-ALERT.

- (1) Remove adjustable sensor (A) in fig. 1, from both WHEEL-ALERT switches.
- (2) Secure left WHEEL-ALERT (B) with U-Bolt onto axle as close as possible to left hand wheel. **Do not over tighten.**
- (3) Secure right WHEEL-ALERT (C) with U bolt onto axle as close as possible to the right hand wheel. **Do not over tighten.**
- (4) Secure firmly the electrical cable (D) along the back of the axle, with the cable ties provided (E). If cable (D) is too long, disconnect (F) and (G) connection and cut off excess cable (D) from left hand side WHEEL-ALERT (B), reconnect in original fashion.
- (5) It is important to leave some slack between (F) and (G) axle connection and the underfloor of the trailer to compensate for suspension movement.
- (6) Secure the rest of the electric cable under the floor of the trailer adjacent to the existing electric line.
- (7) Mount provided "male" 2 pin plug onto towing vehicle close to existing towing plug (mounting holes 2 X 4mm diameter, cable hole 7mm diameter).
- (8) Connect **brown wire** to pin B.
- (9) Connect **white wire** to pin C.
- (10) Secure the cable under the floor of towing vehicle adjacent to existing electric line, use provided 102mm quikties, cable ending under the dashboard.
- (11) Mount buzzer firmly onto or under the dashboard.
- (12) Connect **white wire** to earth battery terminal (fig. 2).
- (13) **Brown wire** must be connected to ignition at the fuse box with fuse and buzzer in line (fig. 2).
- (14) Place the trailer coupled to the towing vehicle on a flat level surface with the trailer tyres correctly inflated.
- (15) Assemble adjustable sensor (A) to WHEEL-ALERT (B) and (C). The adjustable sensor tip must be located **no less** than 20mm from the road surface. Cut off excess to achieve this (fig. 3).

OUR AIM
TO PROVIDE 100% SATISFACTION
IF WE HAVE, TELL YOUR FRIENDS
IF NOT, TELL US.

Patent Pending. Application No. PM 3583



DISTRIBUTED BY
HAPPY WANDERER
CARAVAN ACCESSORIES


Unit 2 / 54 Byre Avenue
Somerton Park SA 5044

Phone (08) 8376 2411
Fax (08) 8376 2455

Mobile 0409 678 350



DISTRIBUTED BY
HAPPY WANDERER
CARAVAN ACCESSORIES
Unit 2 / 54 Byre Avenue
Somerton Park SA 5044
Phone (08) 8376 2411
Fax (08) 8376 2455

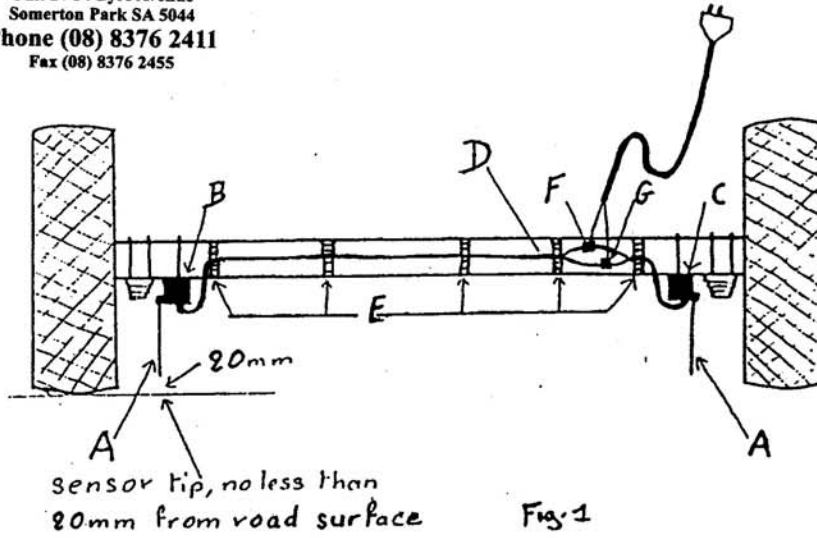

WARNING: WRONG CONNECTIONS
CAN DAMAGE YOUR CAR
ELECTRICAL SYSTEM.
CONSULT AN AUTO ELECTRICIAN
IF IN ANY DOUBT OF
PROCEDURE.

Fig. 2

